



# VIP Tent Rentals

## Popcorn machine

- 4 tbsp of oil / butter
- Put ½ cup of popcorn
- 2 tbsp of popcorn salt
- drop the lids
- Press the “pop” button on
- when it stop popping stop the “pop” button
- lift the top up until the magnet catch
- unlatch the pot and let the popcorn fall
- lock it back when its empty
- repeat

## Cotton candy machine

- 1) Turn “On” the power switch and let the machine run for 1-2 minutes.
  - Please make sure the unit runs smoothly before proceeding.
  - If the unit vibrates. Please make sure the unit is level.
- 2) Turn the heat and speed to high and let the unit for 4-5 minutes.
- 3) Put one spoon of clean, fresh, Cotton Candy Sugar into the center of the heating head.
- 4) Cotton Candy will start to be produced within 30 seconds.
- 5) Move a stick or Cotton Candy Cone in a circular motion in the pan to collect the Cotton Candy.
- 6) After finishing, DO NOT turn off the machine.
  - Pour a small amount of clean water into the Heating Head to clean it.
  - Clean the resulting spray from the pan with a soft cloth.
- 7) Turn “Off” the power switch then clean the Heating Head with soft cloth.

## Snow cone machine

- 1) Fill the ice horn with ice.
- 2) NOTE: THE POWER SWITCH IS A ROCKER SWITCH THAT WILL RETURN TO ITS ORIGINAL POSITION. Press and hold the POWER switch to activate blades and begin shaving ice.
- 3) While holding POWER switch down, apply steady downward pressure to the ice pusher
- 4) Release the POWER switch when finished.
- 5) Repeat steps 2-5 for additional batches.